


Open the RTKLIB software-1 (choose the folder)

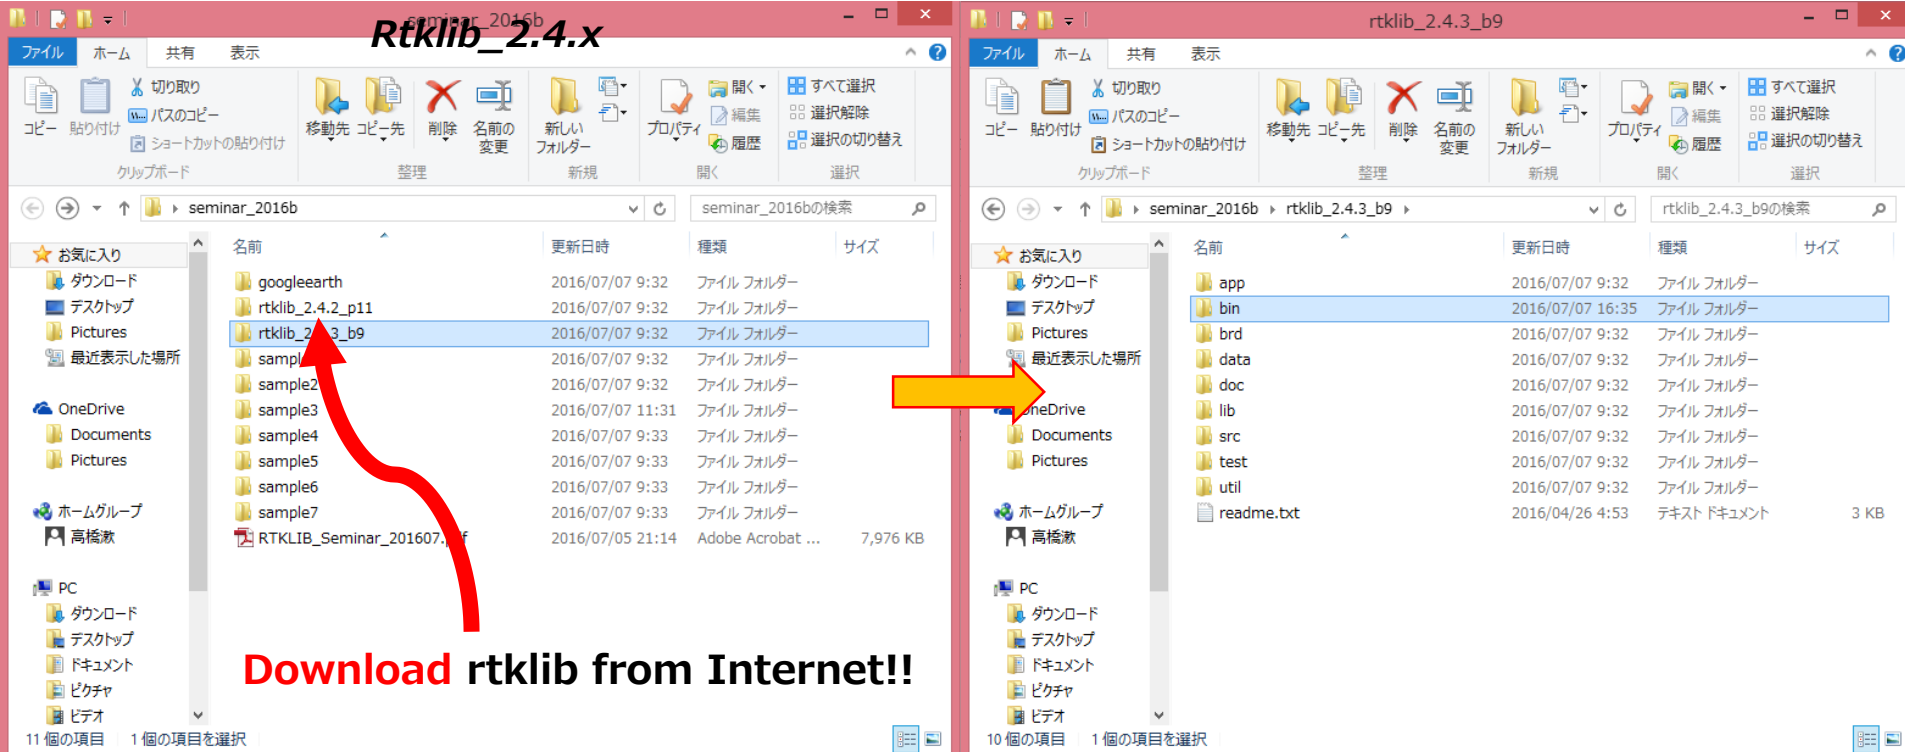

Let's Download It From Here!! ↓



<http://www.rtklib.com> or

<https://github.com/tomojitakasu/RTKLIB>

Manual

http://www.rtklib.com/prog/manual_2.4.2.pdf

Open the RTKLIB software-2 (Open the Lancher)

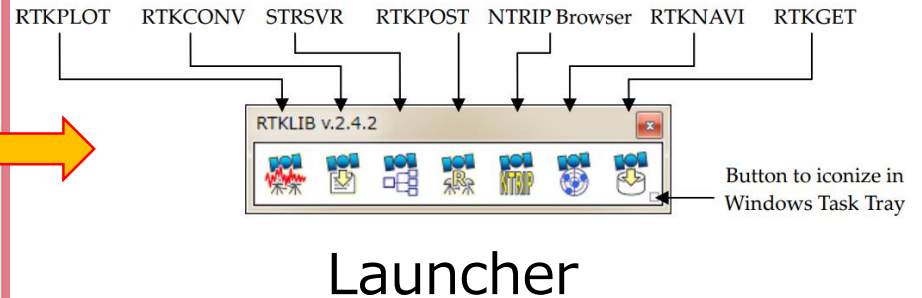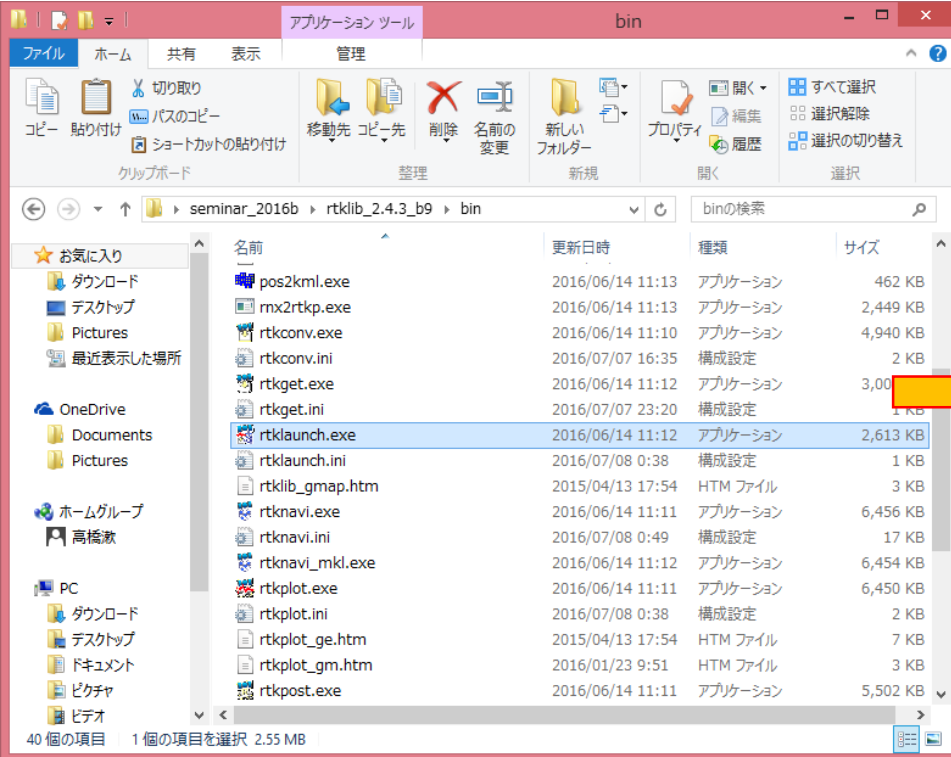

Launcher

rtklib_ver_patch > bin > rtklaunch.exe